
connec	connector layout changed		
Add GP	Add GPS + comms surge protectors, 5/16/13	5/16/13	
thru ho	thru holes for RF bulkheads.		
TNC an	TNC and vent switched places.	4/20/09	В
Initial Release	elease	4/25/08	
REV Description	tion	Date	Appr.

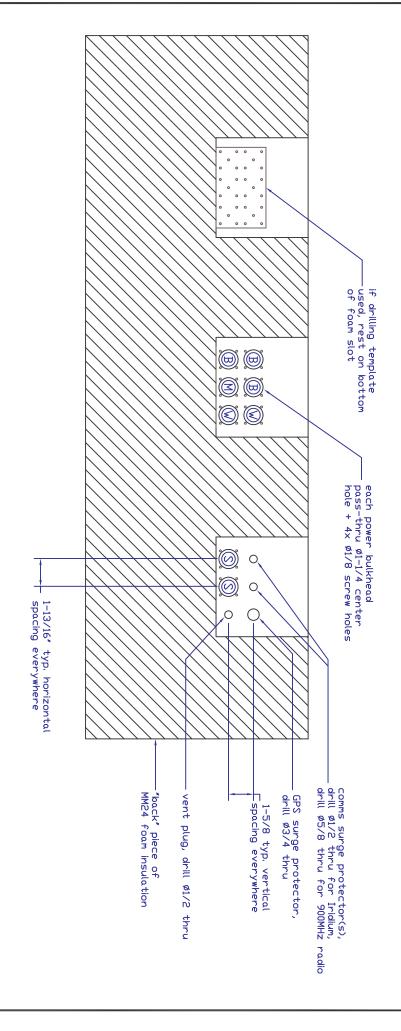

NOTES:

1. See Sheet 2 for connector placement (external view)

Connector thru-hole drilling details (view from inside MM24 enclosure)

- 2. All connectors mounted from the outside of enclosure.
- 3. Power bulkhead pass-thru connectors are mounted with pins facing outward, and key oriented upward
- 4. Use PEI Genesis nut plates and 4-40 x 1/2" socket-head cap screws to attach power bulkhead pass-thru connectors
- 5. Ground plate: UNAVCO P/N PPS-EN-012
 6. Connector drilling template: UNAVCO P/N PPS-EN-004

Polar Perman	Polar Permanent GPS Station	Part Number Rev	mber	Rev
MM24 Enclos	MM24 Enclosure Connector Layout	PPS-EN-009 C	1-009	C
	INAVCO Inc	Drawing: S. White	S. White	
5		Engineering: S. White	S. White	
	TOLAR SERVICES	Approval:		
UNAVCO	UNAVCO 6350 Nautilus Dr., Boulder CO 80301 Date Modified: May 16 2013	Date Modified:	May 16 2	013
	303-381-7500, 303-381-7451 fax	SHEET 2	OF 2	