

How to configure the NetRS Ethernet settings:

If all else fails, Ethernet settings can be configured using the Service serial port on the front of the receiver. To change Ethernet settings:

1. Connect a DB9 serial cable between PC serial port and receiver Serial Port 1 – Service
2. Configure Hyperterm:
115200 8-N-1
Properties>Settings: Terminal keys, Emulation Auto detect, Telnet terminal ID ASCII
Properties>Settings> ASCII setup: Do not send line ends with line feeds, do not echo typed characters locally
3. Boot up receiver by cycling power.
4. Watch boot up messages and verify or change network settings at “Do you want to change Ethernet configuration” prompt.